


## INSTRUCTIONS (Using a 2.5mm Hexagon Key)

1. Remove thermal ribbon from the printer.
2. Release "Lock Screw" by half a turn.
3. Screw in the "Adjustment Screw" until the "Brake Arm" is just clear of the end of the slot.
4. Rewind the "Adjustment Screw" until the "Brake Arm" is resting against the end of the slot.
5. Rewind the "Adjustment Screw" by an additional full turn.
6. Tighten the "Lock Screw".

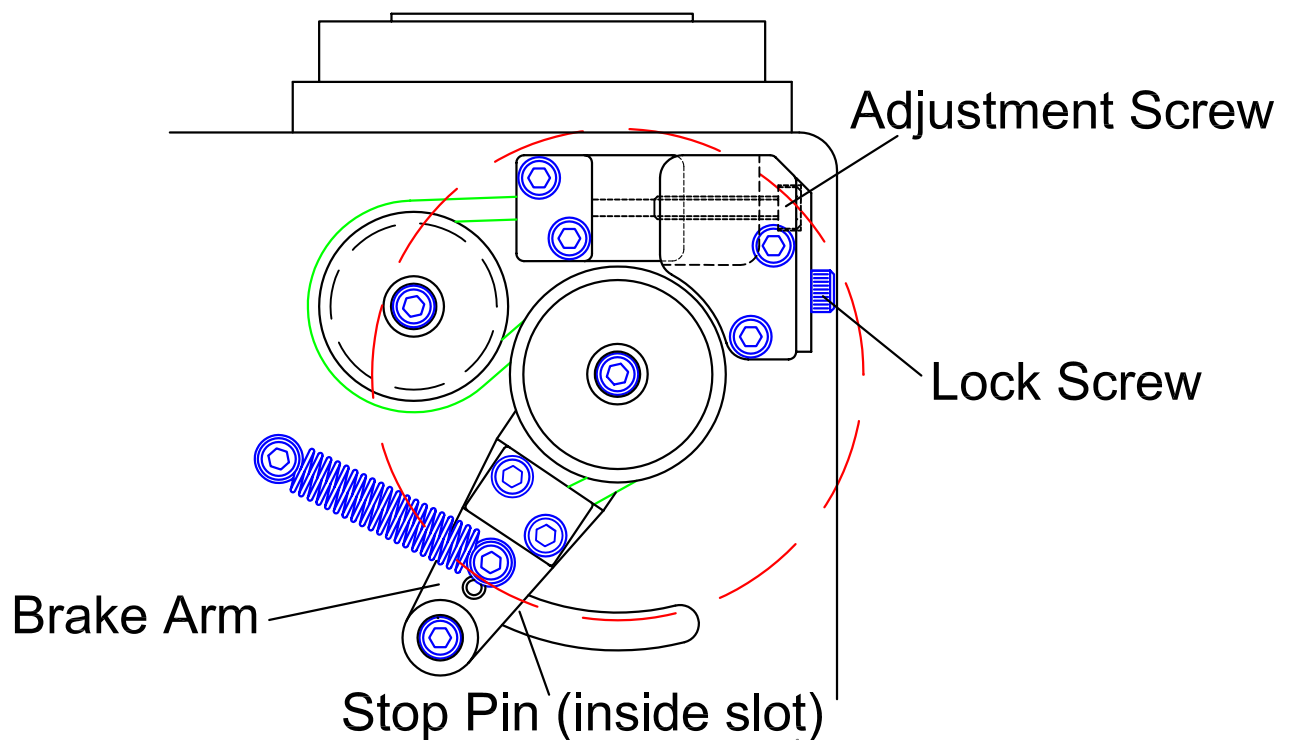

For Printer Models:- 53E

ISSUE	1	DATE	15/05/2003	TITLE	Band Brake Settings (53E)			
DRAWN	CC	CHECKED		SCALE	None	OPEN DATE EQUIPMENT LTD	PART NO	REF 767087