


## Five Volt Adjustment

If a Printer is to be fitted with a special length interconnection cable (3, 5 or 6 Metres), ensure that the **5 Volt DC** supply at the Printer is adjusted to **5.1 Volts**, otherwise the Printer may not function correctly. This can be measured on Pin 5 and Pin 9, of the 9 way "D" serial socket. The voltage is adjusted via the Potentiometer on the front right hand side of the power supply.

Test Connector not supplied

Plug into Serial Port of Printer.

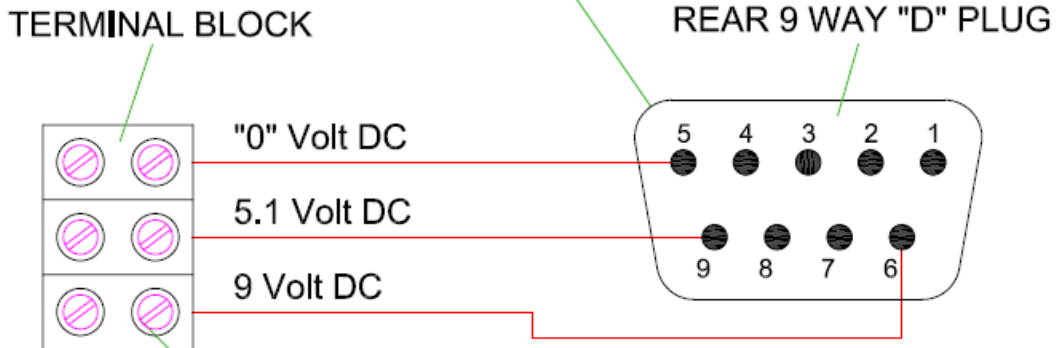

Check with a Multi Meter

