



Intermittent Mini Terminal Flow Chart

MINI TERMINAL (Key mapping)

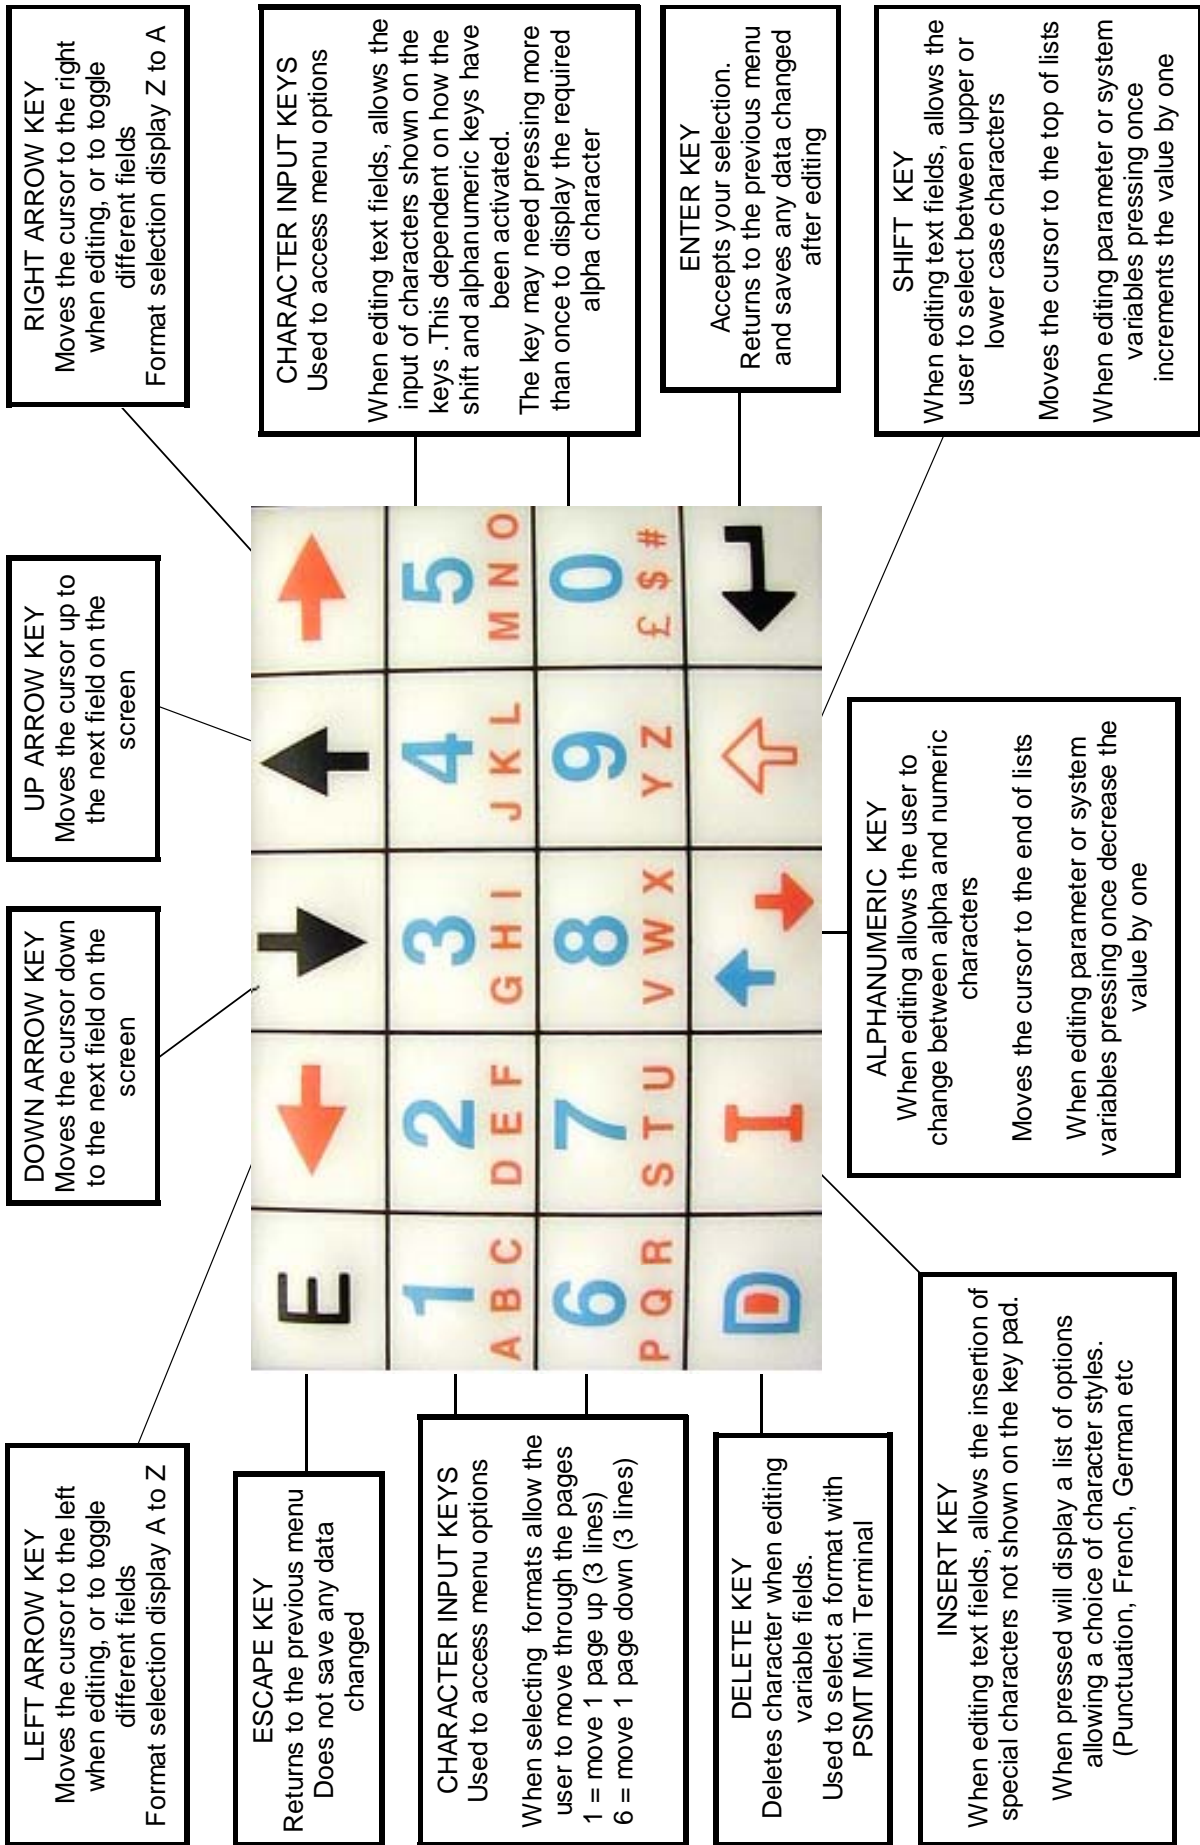


Intermittent Mini Terminal Flow Chart

STATUS DISPLAY SOFTWARE FLOWCHARTS (Level 1: OPERATOR)

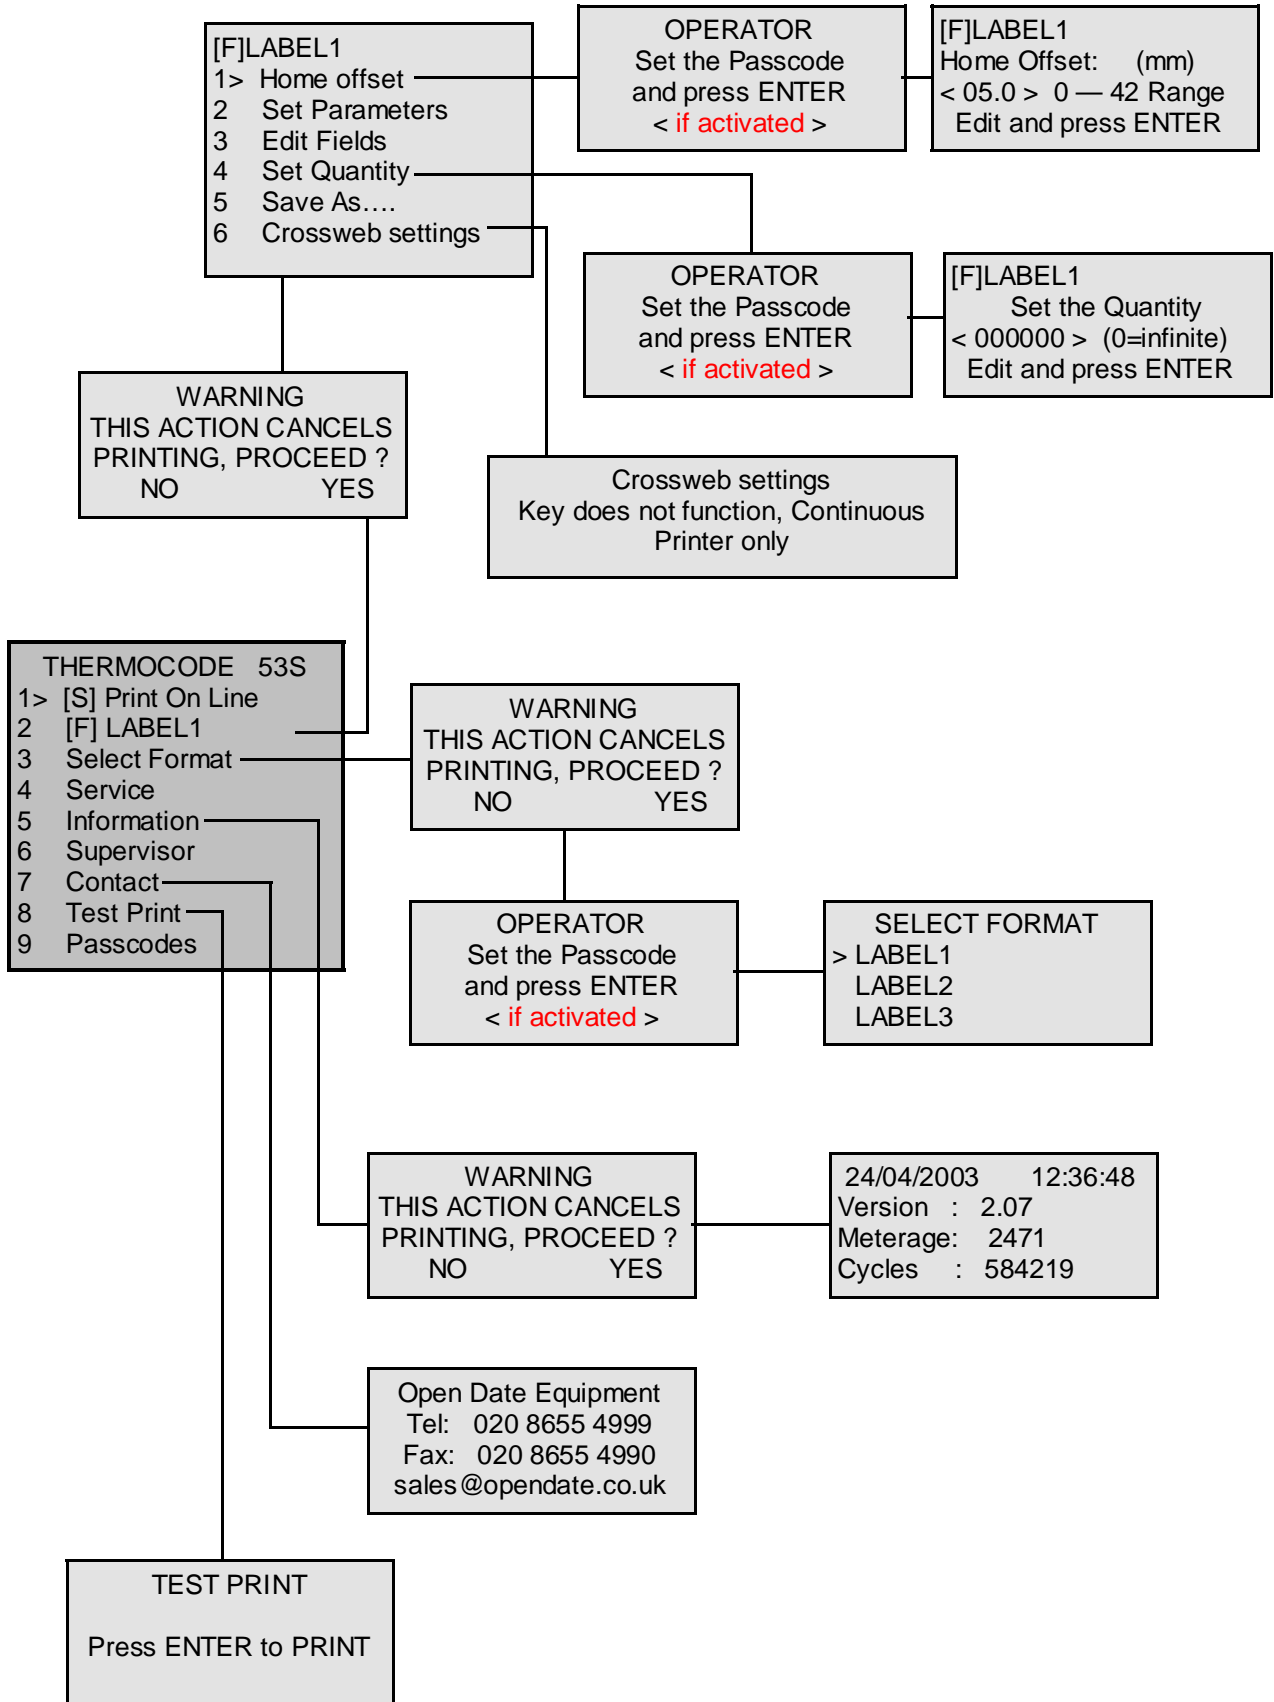


Intermittent Mini Terminal Flow Chart

STATUS DISPLAY SOFTWARE FLOWCHARTS (Level 3: ENGINEER)

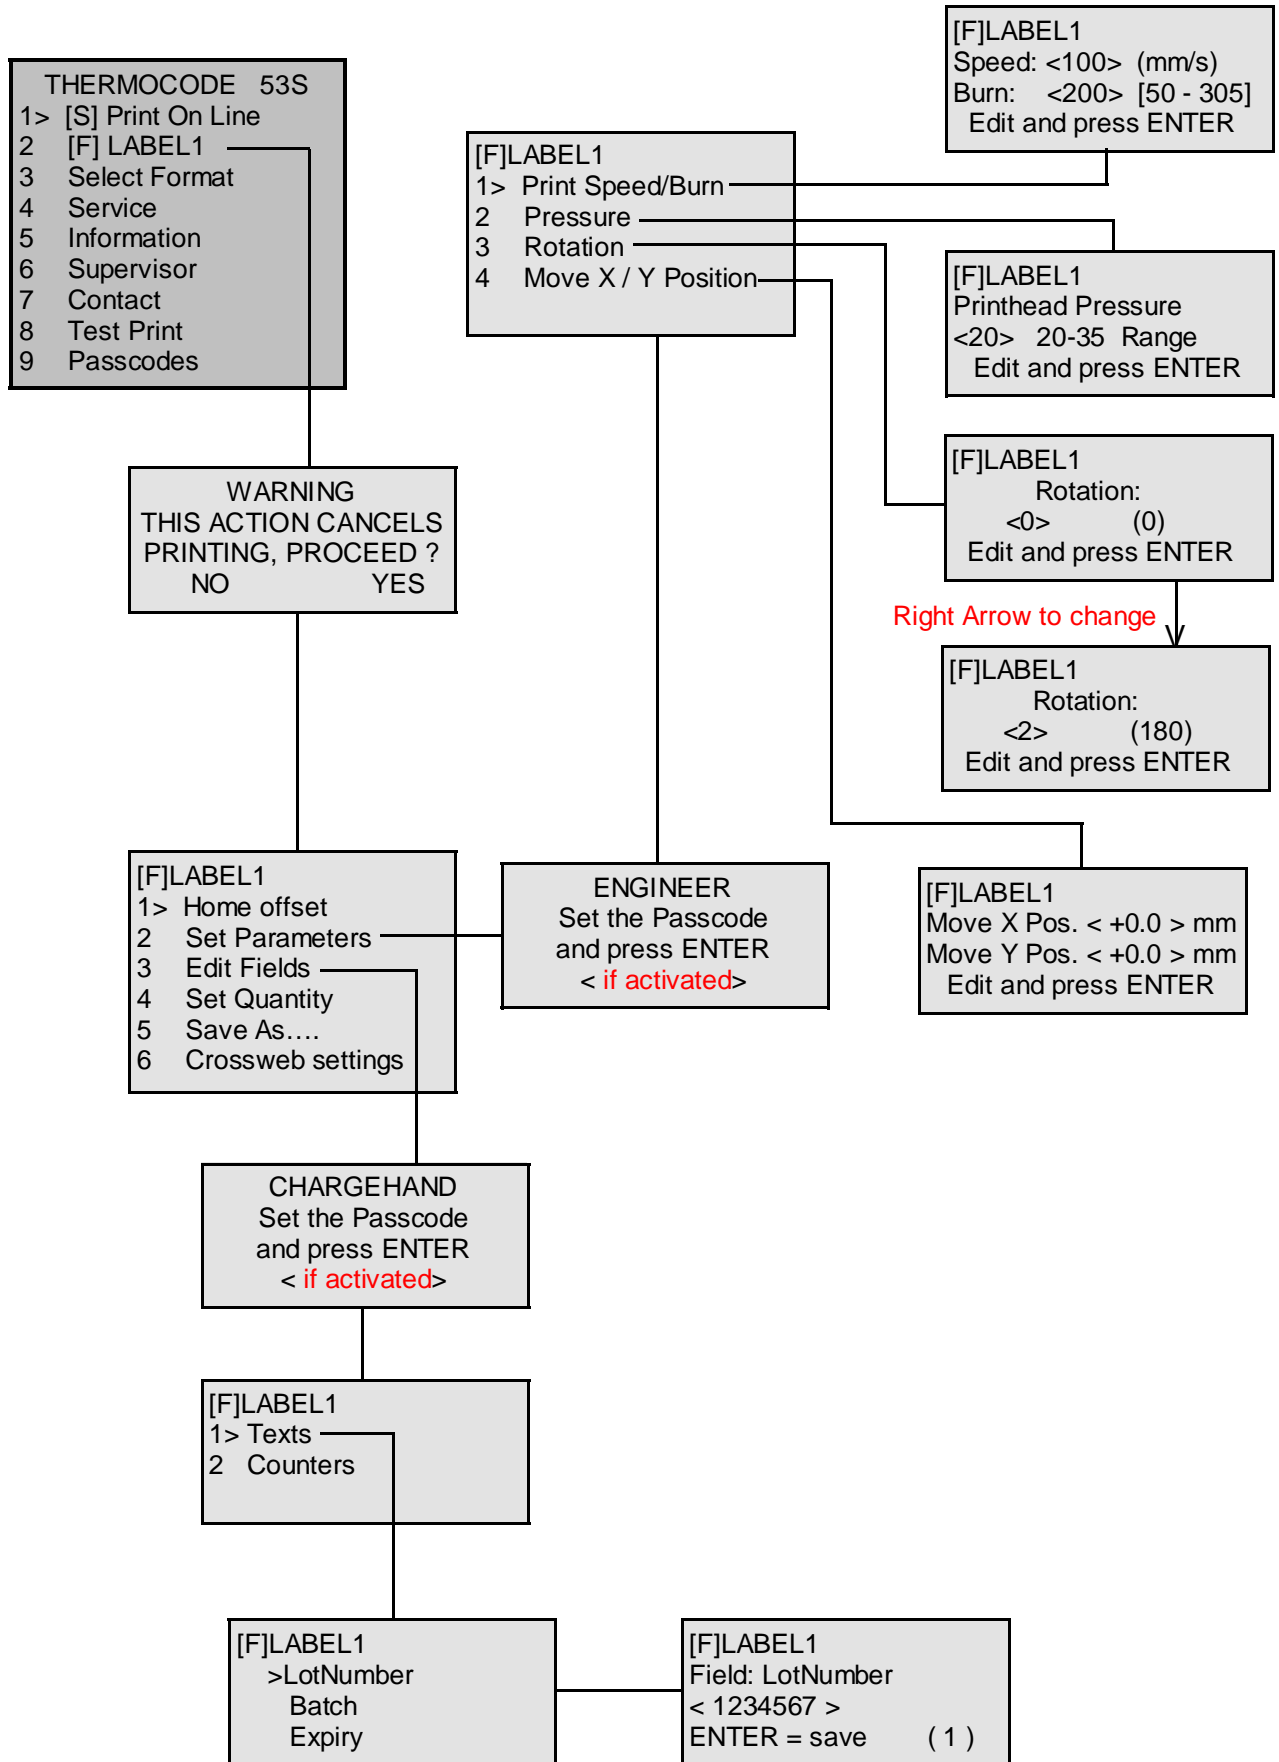


Intermittent Mini Terminal Flow Chart

STATUS DISPLAY SOFTWARE FLOWCHARTS (Level 3: ENGINEER)

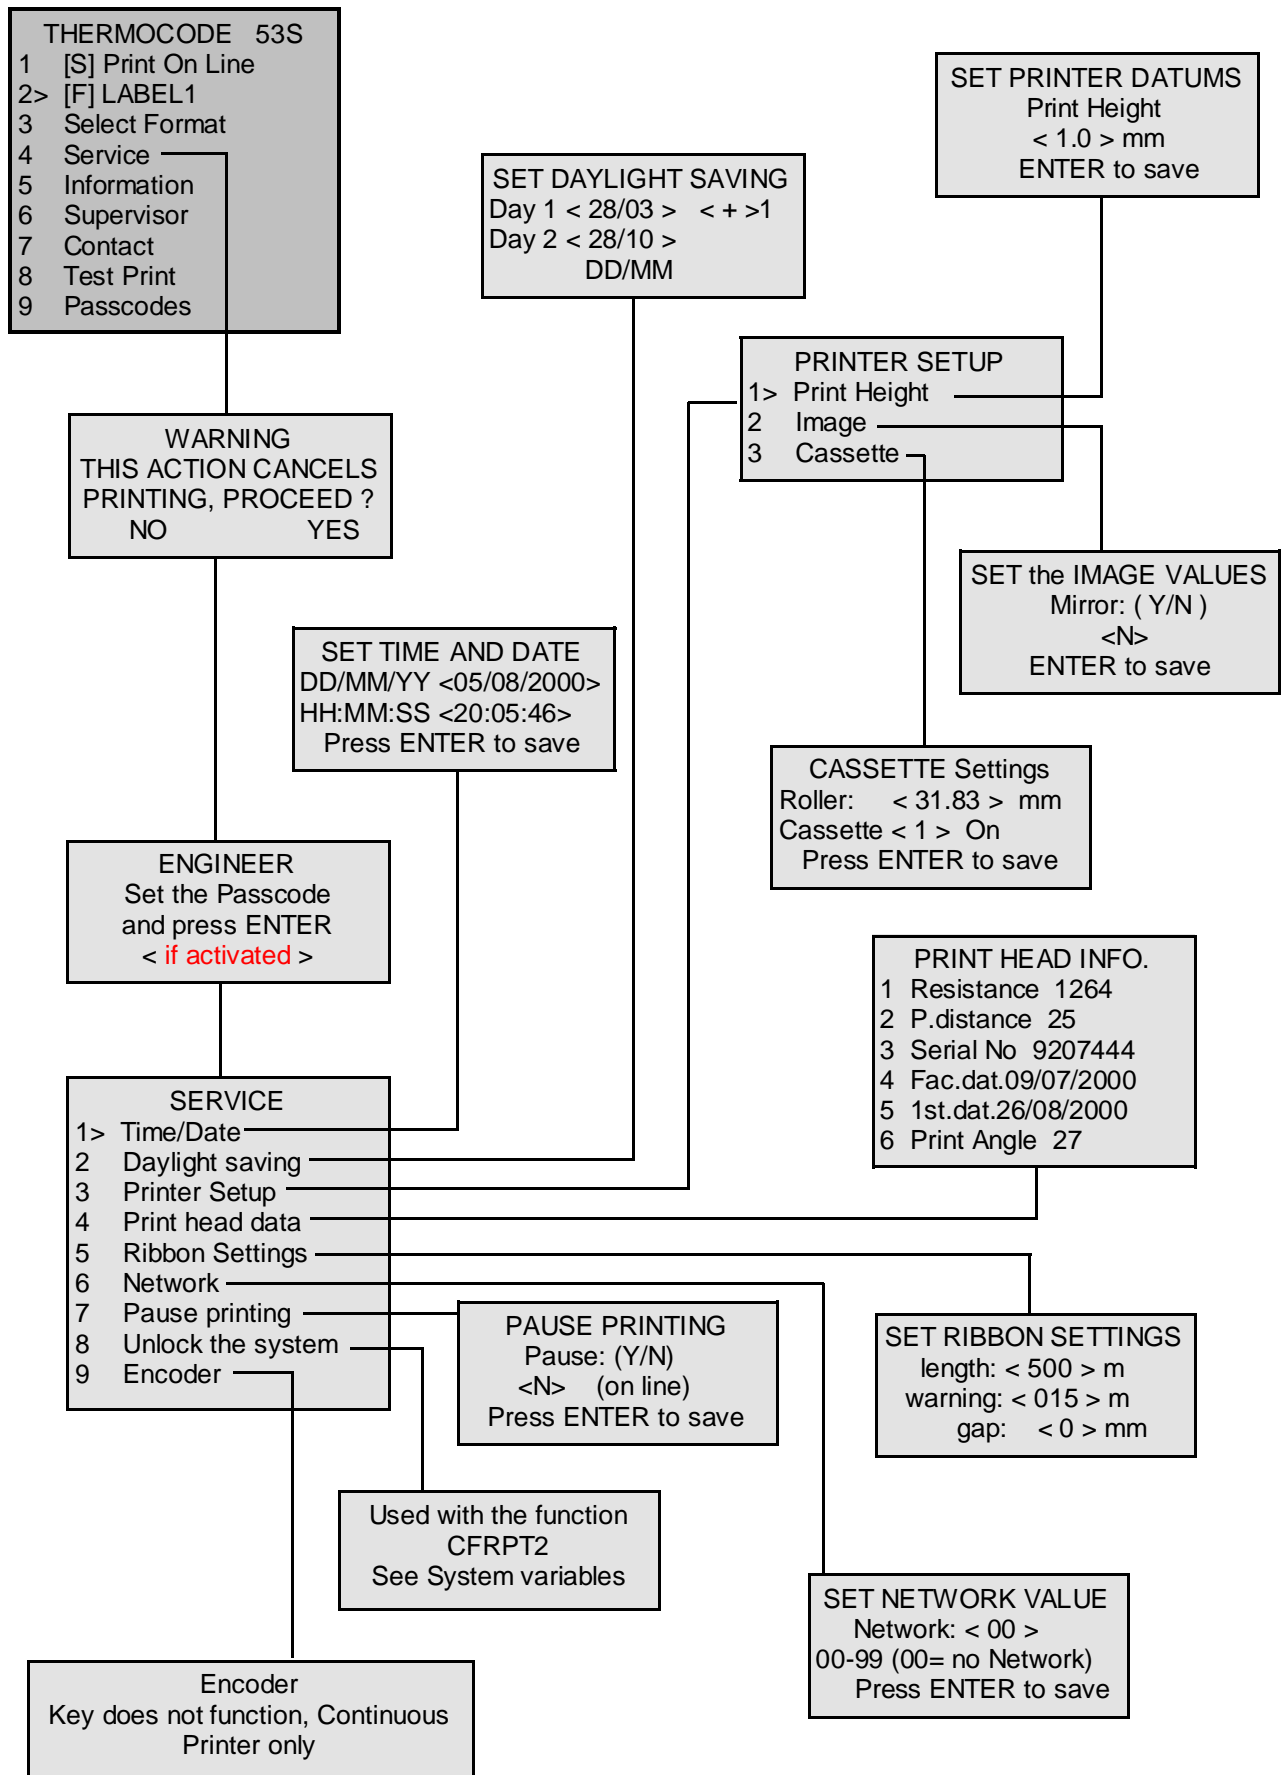


Intermittent Mini Terminal Flow Chart

STATUS DISPLAY SOFTWARE FLOWCHARTS (Level 4: MANAGER)

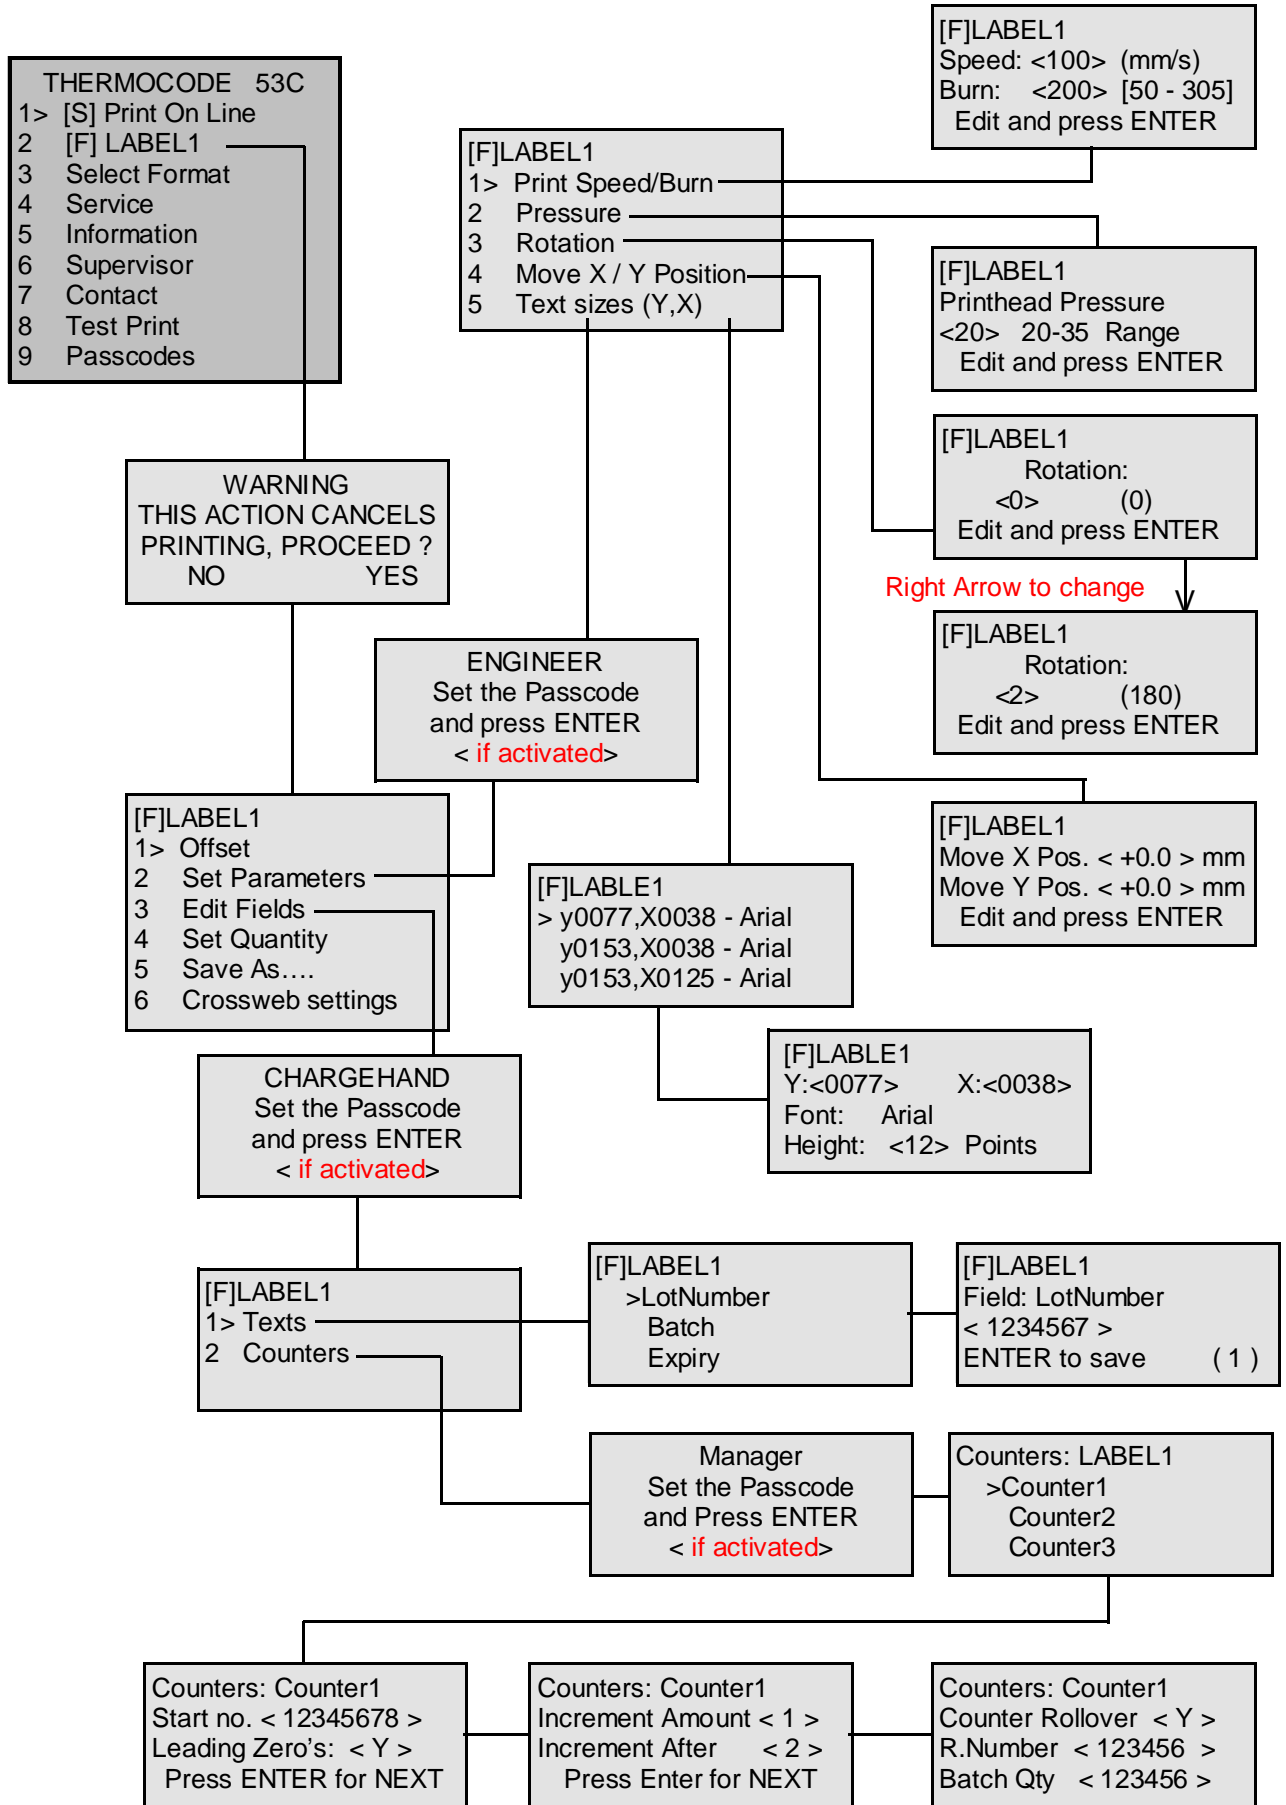


Intermittent Mini Terminal Flow Chart

STATUS DISPLAY SOFTWARE FLOWCHARTS (Level 5: SUPERVISOR)

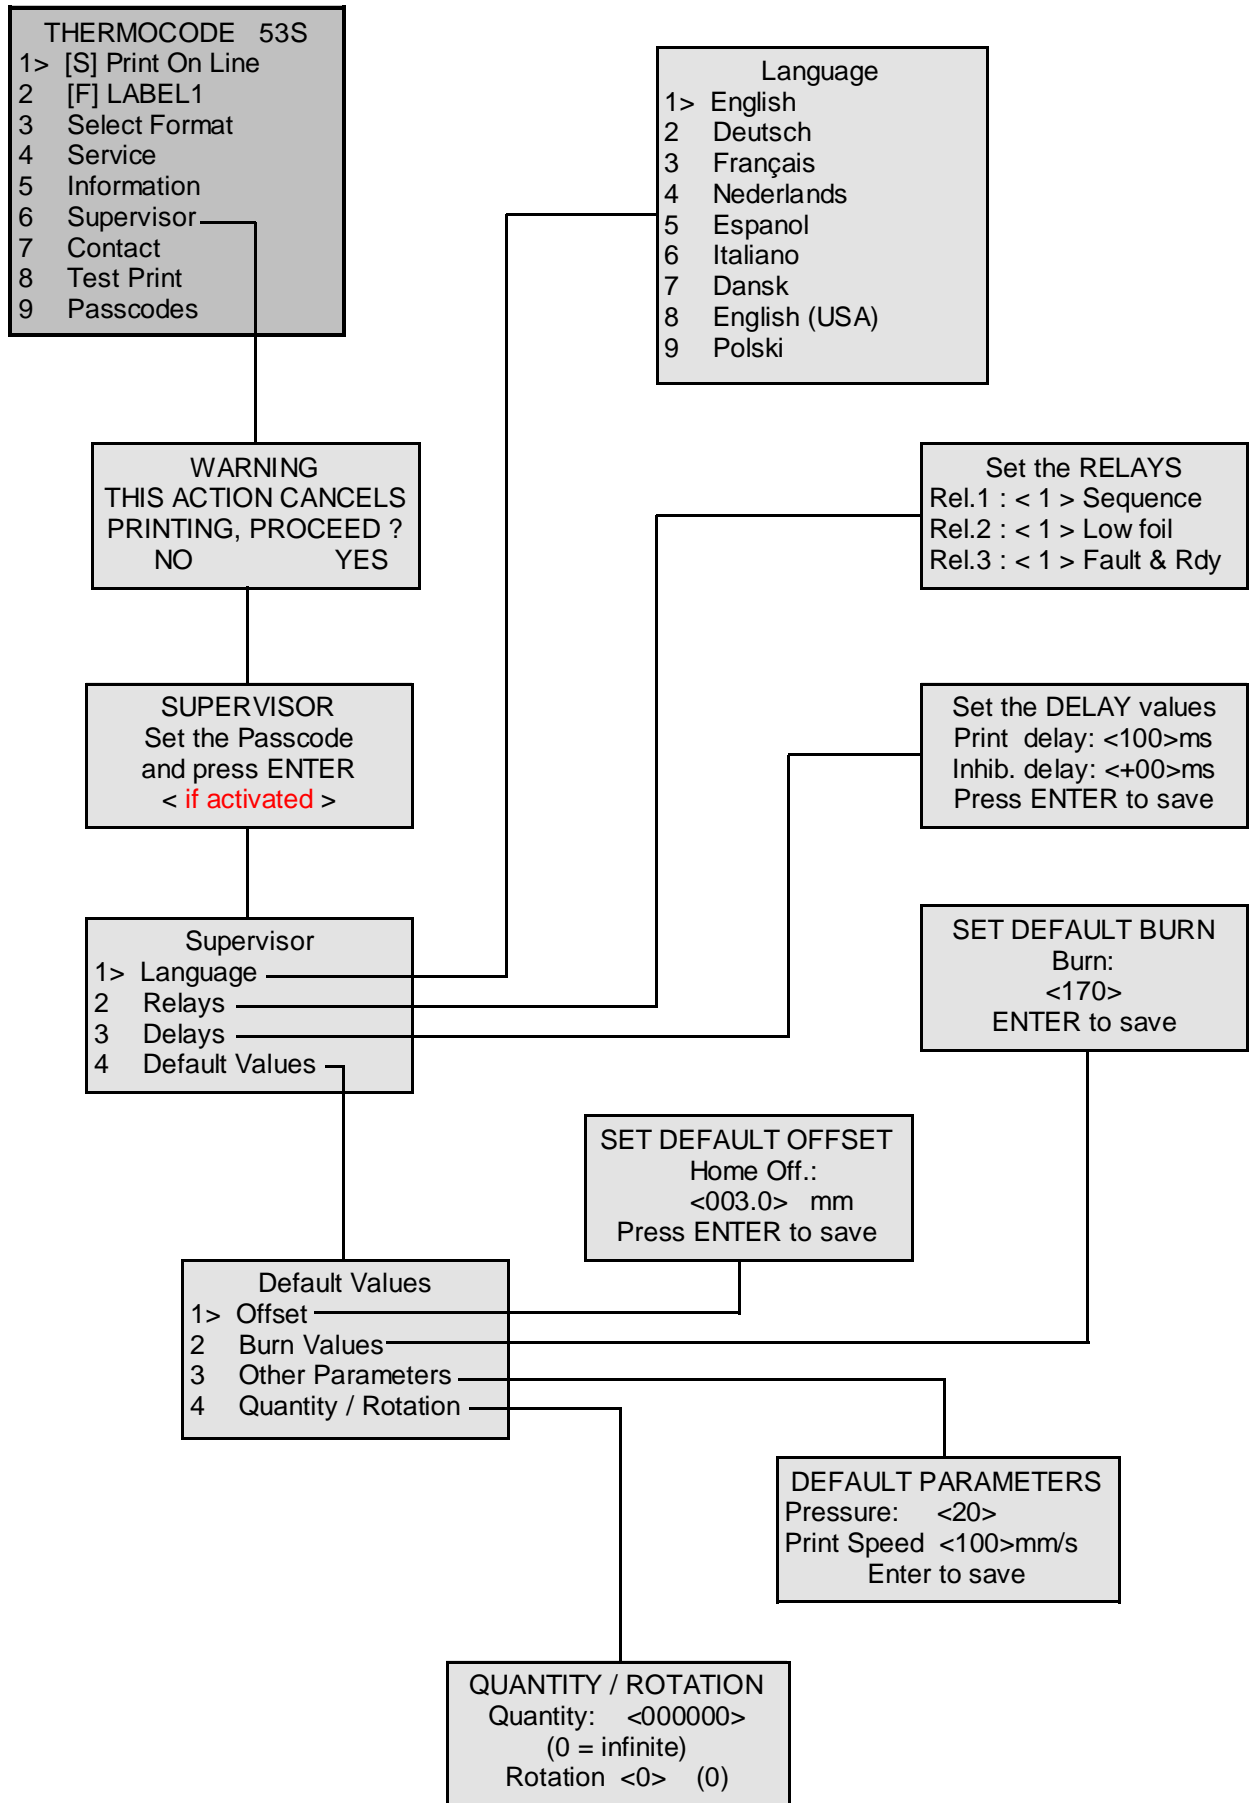


Intermittent Mini Terminal Flow Chart

STATUS DISPLAY SOFTWARE FLOWCHARTS (Level 7: PROGRAMMING)

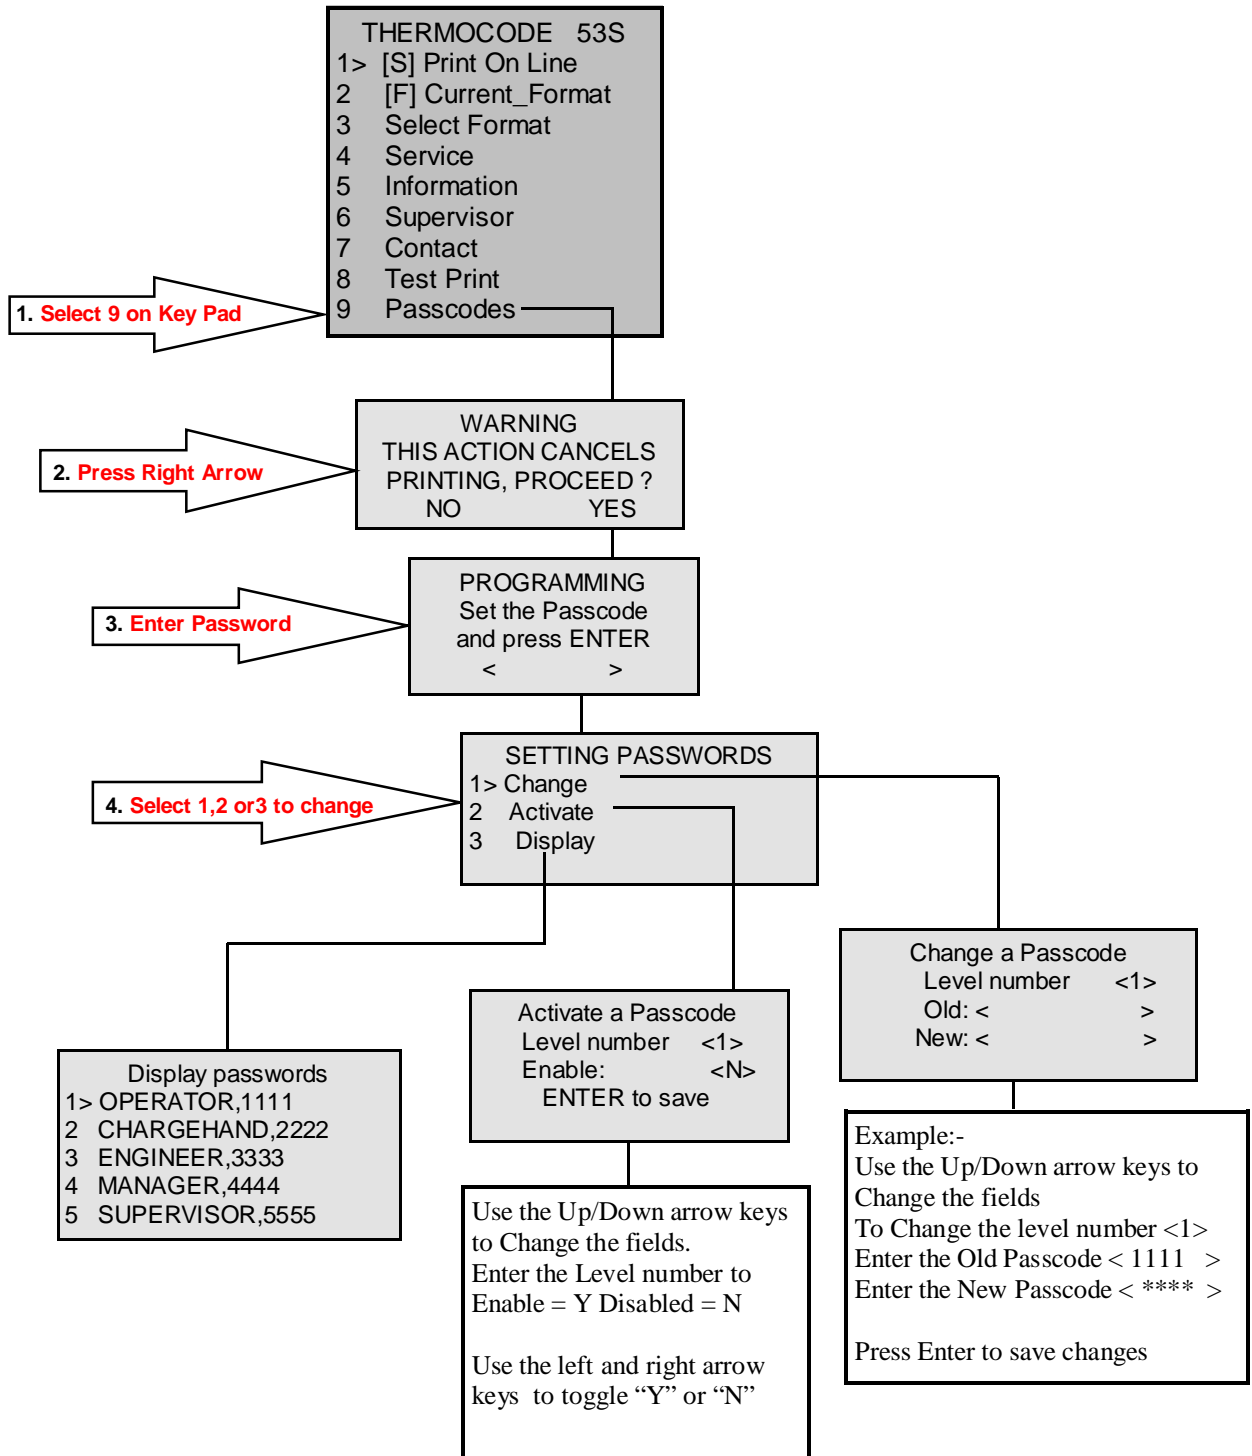

Intermittent Mini Terminal Flow Chart

Selecting a New Format

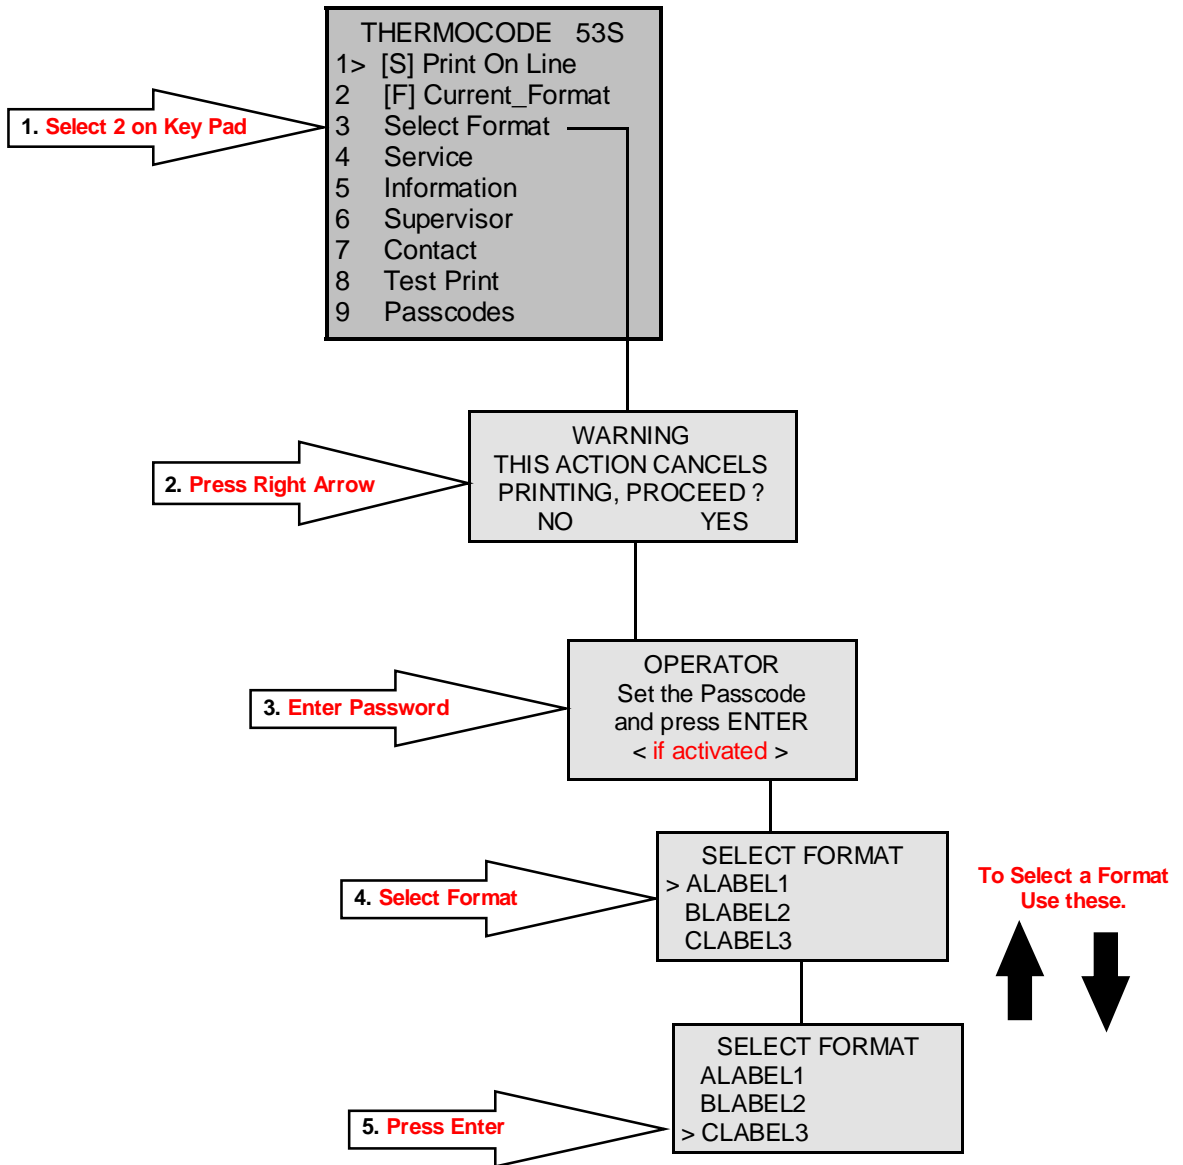

Left Arrow A to Z ←

```
SELECT FORMAT  
> ALABEL1  
BLABEL2  
CLABEL3
```

```
SELECT FORMAT  
> 1_LABEL  
2_LABEL  
3_LABEL
```


→ Right Arrow Z to A

```
SELECT FORMAT  
>CLABEL3  
BLABEL2  
ALABEL1
```

```
SELECT FORMAT  
> 3_LABEL  
2_LABEL  
1_LABEL
```


Intermittent Mini Terminal Flow Chart

Editing Text Fields

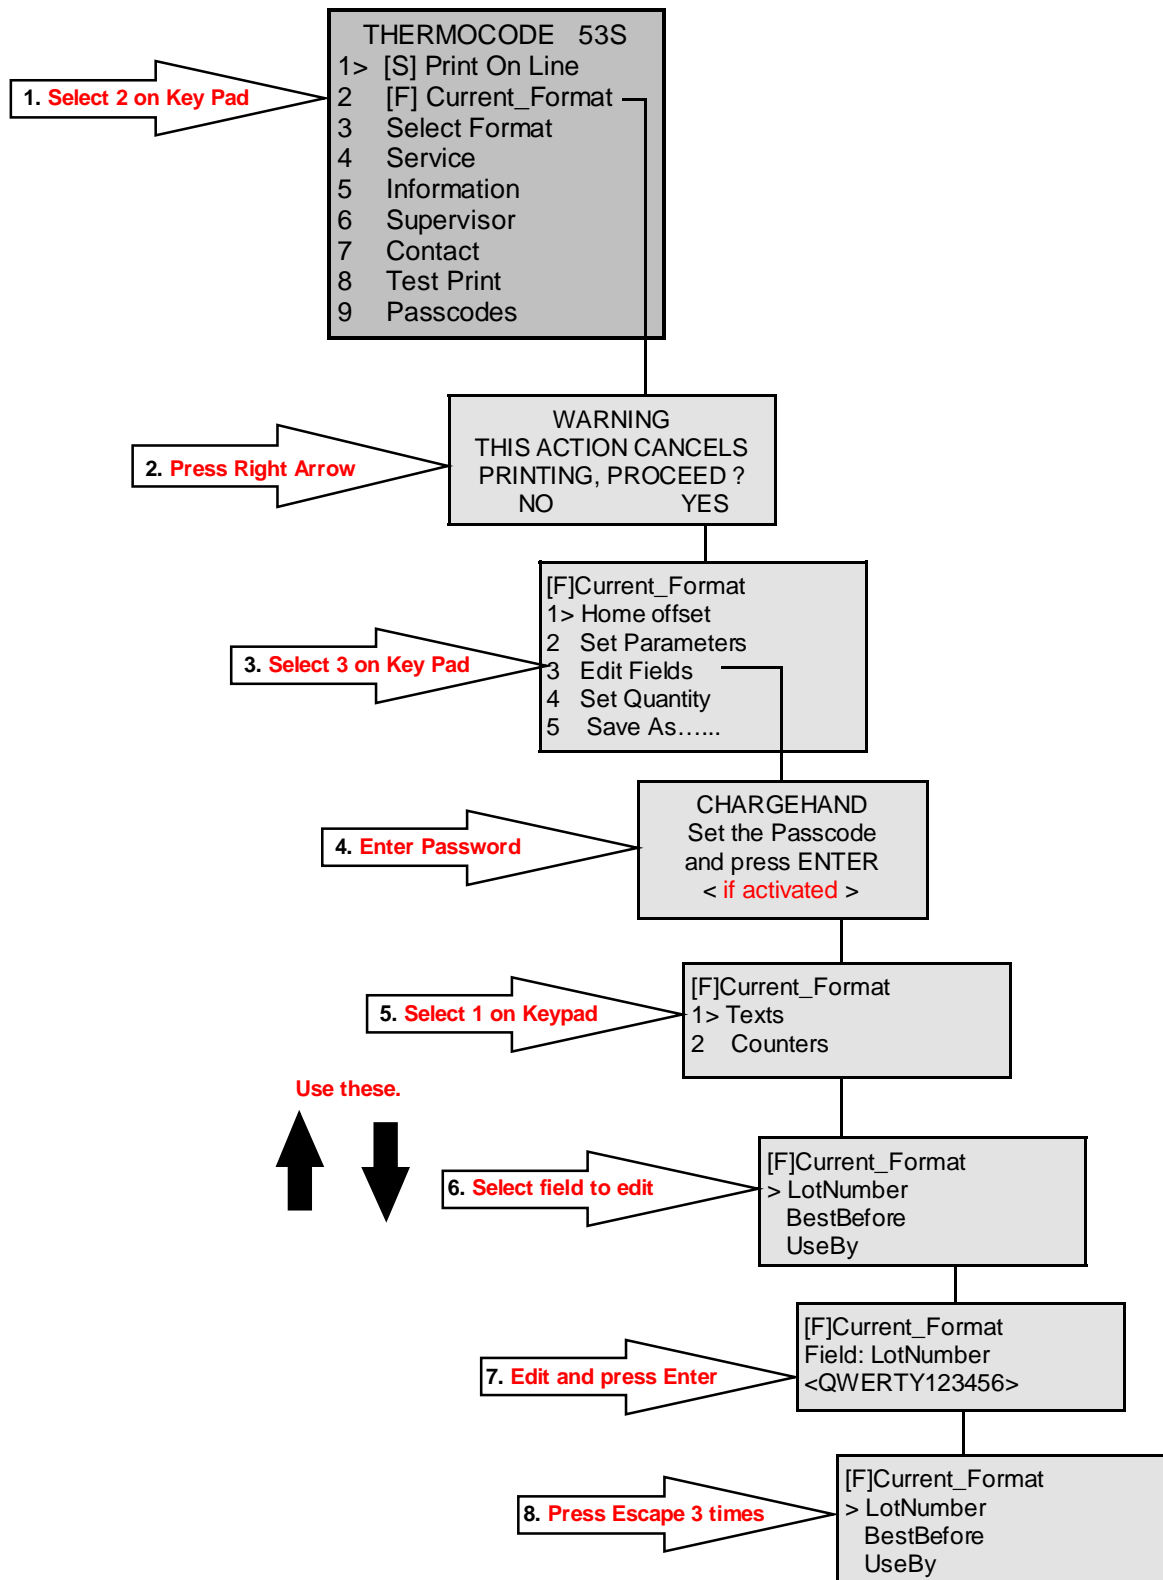


Intermittent Mini Terminal Flow Chart

Editing Home Offset

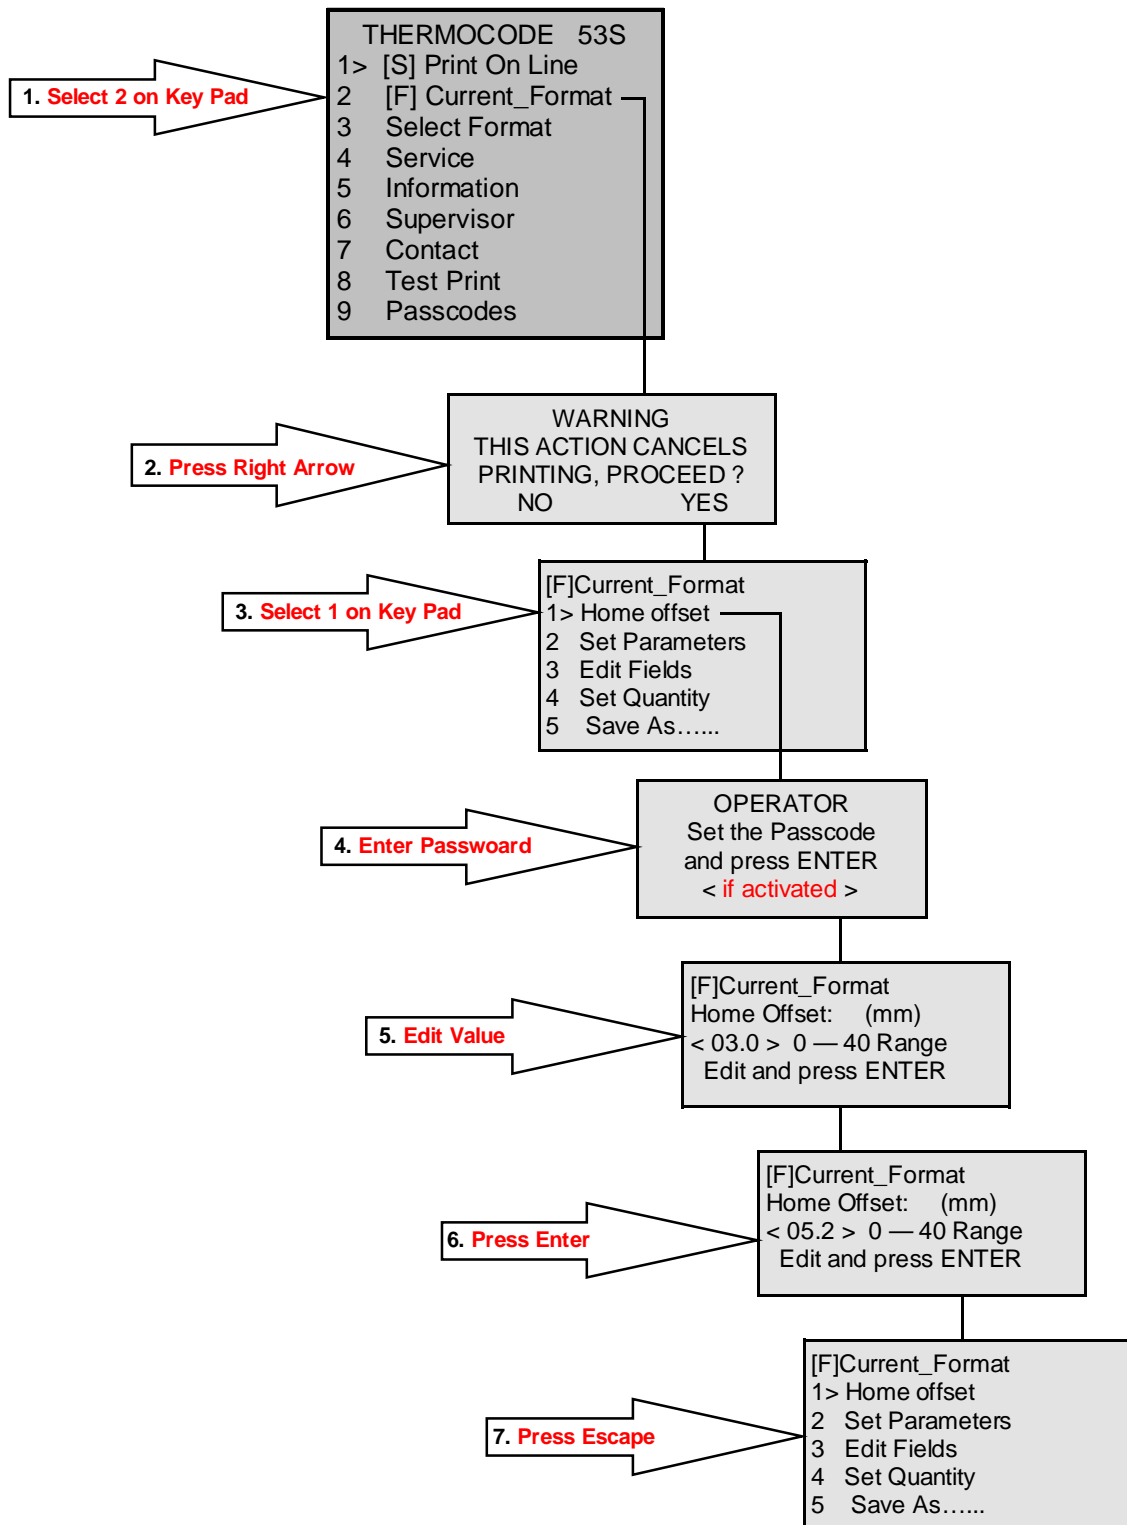


Intermittent Mini Terminal Flow Chart

MAKING TEST PRINTS

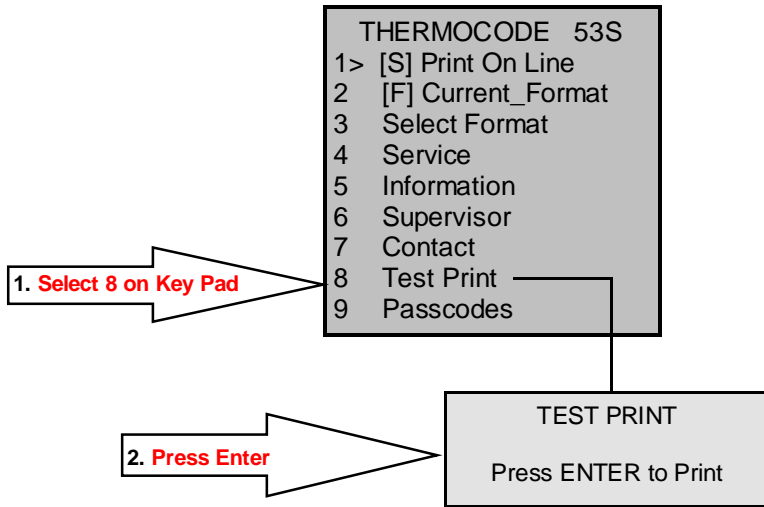

Holding down the ENTER key will allow continual Printing

Information screen

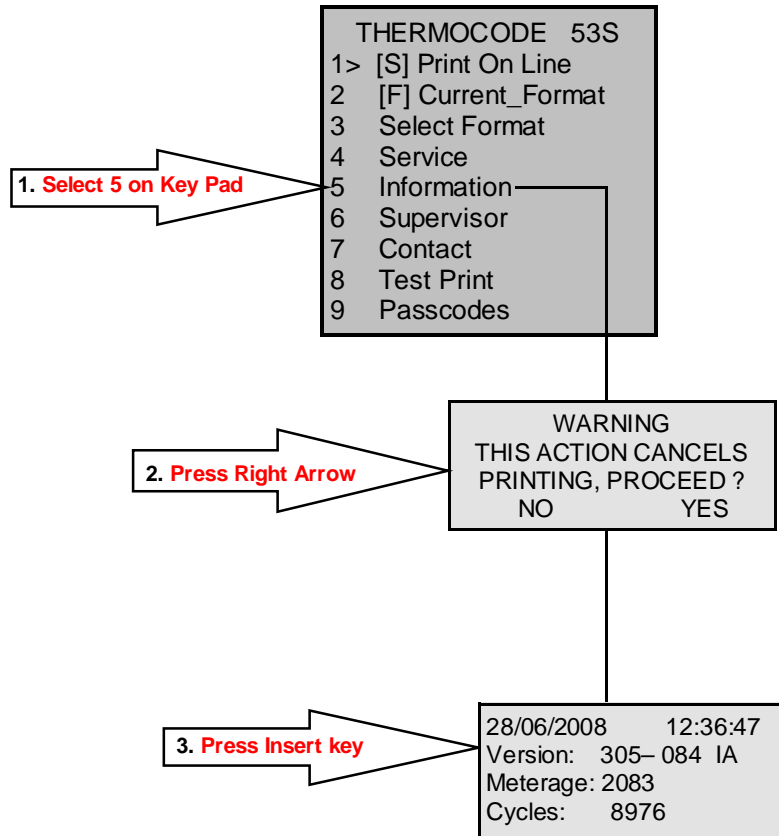

Intermittent Mini Terminal Flow Chart

Common to all Thermocode 2 Printer

STATUS DISPLAY SOFTWARE FLOWCHARTS (Level 7: PROGRAMMING)

