

Changing the Termode Password


Using Explorer Open the File OPD_Term.ini Found it the C:\ Drive.

Double Click on the file **OPD_Term.ini**. This will open the file in Notepad.

Alpha, Numeric or a mixture of both. These can be Upper or lower case.

Minimum 1 Maximum 12 alphanumeric characters.

Edit the Password, and then Click on **File** Click on **Save** Click on **Exit**

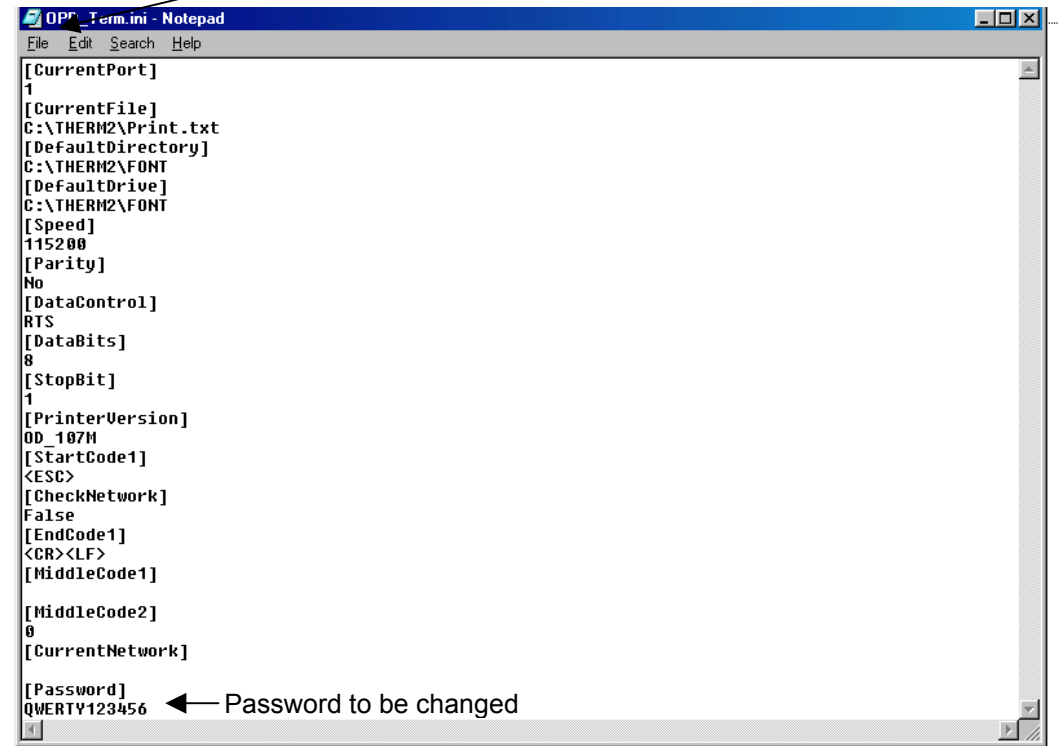

```
[CurrentPort]
1
[CurrentFile]
C:\THERM2\Print.txt
[DefaultDirectory]
C:\THERM2\FONT
[DefaultDrive]
C:\THERM2\FONT
[Speed]
115200
[Parity]
No
[DataControl]
RTS
[DataBits]
8
[StopBit]
1
[PrinterVersion]
OD_107M
[StartCode1]
<ESC>
[CheckNetwork]
False
[EndCode1]
<CR><LF>
[MiddleCode1]

[MiddleCode2]
0
[CurrentNetwork]

[Password]
QWERTY123456 ← Password to be changed
```

As shown the password used must be directly below **[Password]**